

Remote Control Overview

POWER
Turns Recorder Combi Receiver ON and OFF.

DVD
Select the Recorder Combi Receiver's function mode to DVD.

VCR
Select the Recorder Combi Receiver's function mode to VCR.

FM/AM Tuner select
Select FM or AM band as the listening choice. (FM and AM bands).

0-9 numerical buttons
Selects numbered options in a menu.

TITLE
Displays the disc's Title menu, if available.

MARKER
Marks any point during playback.

SEARCH
Displays Marker Search menu.

ZOOM
Enlarges DVD video image.

MENU/LIST
Accesses menu on a DVD disc, Title List or Playlist menu.

DISPLAY
Accesses On-Screen Display. Displays information while viewing a TV program.

LEVEL
To set the sound level of desired channel.

SKIP(-/+) (◀◀ / ▶▶)
Go to next chapter or track. Returns to beginning of current chapter or track or go to previous chapter or track.

DELAY
To set the delay time of each speaker in Dolby Digital and Dolby Pro Logic II mode.

SCAN(-/+) (◀◀/▶▶)
- DVD: Search backward or forward.
- VCR: Rewinds/Advances the tape during the STOP mode, for fast reverse/forward picture search.

PAUSE/STEP (II)
- Pause playback or recording temporarily.
- Press repeatedly for frame-by-frame playback.

▶ (PLAY)
Starts playback.

STOP (■)
Stops playback or recording.

● REC
Starts recording. Press repeatedly to set the recording time.

REC MODE
Selects the recording mode:
- DVD : SP, LP, EP or XP.
- VCR : SP or SLP.

TIMER REC
Displays Timer Record menu.

MUTE
Turns the sound on and off temporarily.

TV Control Buttons

- **POWER**: Switches TV ON and OFF.
- **CHANNEL ▲/▼**: Selects TV's channel.
- **VOLUME +/-**: Adjusts TV's volume.
- **TV INPUT**: Selects the TV's source.
- **MUTE**: Turns on or off TV sound.

EJECT, OPEN/CLOSE
- Opens and closes the disc tray.
- Ejects the tape in the VCR deck.

AV
Changes the input to use for recording. (Tuner, OPT, AV 1, AV 2 or DV).

TEST TONE
To adjust the sound balance of the speakers from the listener's position.

SUBTITLE
Selects a subtitle language.

AUDIO/MO.ST.
- Selects an audio language.
- Selects STEREO or MONO.

SOUND MODE
Selects sound mode.

XTS
To enjoy great sound effect.

SETUP
Accesses or removes the Setup menu.

◀▶▲▼ (left/right/up/down)
Selects menu options.

TRK/PRESET(-/+) (▲/▼):
- Adjusts manually the tape's picture onscreen.
- Selects a program.

MEMORY/ENTER
- Confirms menu selections.
- Stores a radio station's frequency in the tuner's memory.

RETURN (↶)
Removes the menu.

VOLUME (+/-)
To adjust speaker volume and TV volume.

DUBBING
Press to copy DVD to VCR (or VCR to DVD).

CHP ADD
Inserts a chapter marker when playing/recording.

THUMBAIL
Selects a thumbnail picture for the current title for use in the Title List or Chapter List menu.

CLEAR
Removes a mark on the Marker Search menu.

REPEAT
Repeat chapter, track, title or all.

REPEAT A-B
Repeats sequence between two points (A and B)

RANDOM
Plays tracks in random order.

TV/VCR
To view channels selected by the VCR tuner or by the TV tuner.

CARD
Accesses the Photo (or Music) menu for memory card.

